




Betjeningsvejledning

Løftetabel

3.2

KONECRANES | GOTTWALD Havnemobilkran GHMK 5506
125 t / 63 t

Løftekapacitet (t)							
							
	Normal last	Spreader I	Spreader II	Spreader II twinlift	Grab	Sær last	Tung last
							
Vippelastfaktor	<75%	<75%	<75%	<75%	<50%	<75%	<75%
Tilladt vindhastighed i drift (m/s)	20,2	20,2	20,2	20,2	24,6	14,3	14,3
Radius (M)							
11	63,0	41,0	41,0	50,0	40,0	125,0	100,0
12	63,0	41,0	41,0	50,0	40,0	125,0	100,0
13	63,0	41,0	41,0	50,0	40,0	125,0	100,0
14	63,0	41,0	41,0	50,0	40,0	125,0	100,0
15	63,0	41,0	41,0	50,0	40,0	125,0	100,0
16	63,0	41,0	41,0	50,0	40,0	125,0	100,0
17	63,0	41,0	41,0	50,0	40,0	125,0	100,0
18	63,0	41,0	41,0	50,0	40,0	125,0	100,0
19	63,0	41,0	41,0	50,0	40,0	122,5	100,0
20	63,0	41,0	41,0	50,0	40,0	120,0	100,0
21	63,0	41,0	41,0	50,0	40,0	117,0	100,0
22	63,0	41,0	41,0	50,0	40,0	111,0	100,0
23	63,0	41,0	41,0	50,0	40,0	106,0	100,0
24	63,0	41,0	41,0	50,0	40,0	100,0	100,0
25	63,0	41,0	41,0	50,0	40,0	96,0	96,0
26	63,0	41,0	41,0	50,0	40,0	91,7	91,7
27	63,0	41,0	41,0	50,0	40,0	87,2	87,2
28	63,0	41,0	41,0	50,0	40,0	82,9	82,9
29	63,0	41,0	41,0	50,0	40,0	78,9	78,9
30	63,0	41,0	41,0	50,0	40,0	75,2	75,2
31	63,0	41,0	41,0	50,0	40,0	71,8	71,8
32	63,0	41,0	41,0	50,0	40,0	68,7	68,7
33	63,0	41,0	41,0	50,0	40,0	65,9	65,9
34	63,0	41,0	41,0	50,0	40,0	63,0	63,0
35	60,3	41,0	41,0	49,6	38,8	60,3	60,3
36	57,8	41,0	41,0	47,1	37,5	57,8	57,8
37	55,5	41,0	41,0	44,8	36,2	55,5	55,5
38	53,3	41,0	41,0	42,6	34,9	53,3	53,3
39	51,3	41,0	40,6	40,6	33,6	51,3	51,3
40	49,3	40,3	38,6	38,6	32,0	49,3	49,3
41	47,5	38,5	36,8	36,8	31,1	47,5	47,5
42	45,7	36,7	35,0	35,0	30,8	45,7	45,7
43	44,1	35,1	33,4	33,4	29,5	44,1	44,1
44	42,5	33,5	31,8	31,8	28,7	42,5	42,5
45	41,0	32,0	30,3	30,3	27,9	41,0	41,0
46	39,6	30,6	28,9	28,9	27,1	39,6	39,6
47	38,2	29,2	27,5	27,5	26,2	38,2	38,2
48	36,9	27,9	26,2	26,2	25,5	36,9	36,9
49	35,7	26,7	25,0	25,0	24,4	35,7	35,7
50	34,5	25,5	23,8	23,8	23,5	34,5	34,5
51	33,3	24,3	22,6	22,6	22,5	33,3	33,3

Spreader I Spreader II Spreader II
twinlift

Producent: Bromma Stinis Stinis
Type: EHSU EH 170 U EH 170 U
Egenvægt Spreader: 9,0 t 10,7 t 10,7 t
Løftekapacitet Spreader: 41 t 41 t 50 t

Løftekapaciteterne betyder:

1. Normal-, tung, speciallast = last under drejbar krog
2. Grab i wirer = last i wirer
3. Spreaderdrift = last under spreader